

標準音高 =	60
sample rate =	16842

play sample rate = 4000 ~ 100000Hz

36	37	38	39	40	41	42	43	44	45	46	47
4211	4461	4726	5007	5305	5620	5955	6309	6684	7081	7502	7948
48	49	50	51	52	53	54	55	56	57	58	59
8421	8922	9452	10014	10610	11241	11909	12617	13368	14162	15005	15897
60	61	62	63	64	65	66	67	68	69	70	71
16842	17843	18905	20029	21220	22481	23818	25234	26735	28325	30009	31793
72	73	74	75	76	77	78	79	80	81	82	83
33684	35687	37809	40057	42439	44963	47636	50469	53470	56650	60018	63587
84	85	86	87	88	89	90	91	92	93	94	95
67368	71374	75618	80115	84878	89925	95273	100938	106940	113299	120036	127174